



# Hastings Projector Control Panel Overview

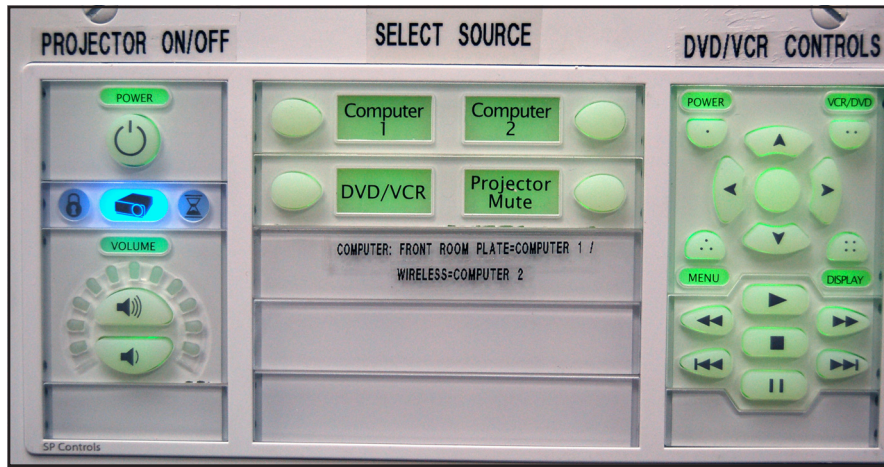

## TURN ON PROJECTOR

EXPECT A 20-30 SECOND WAIT FOR PROJECTOR IMAGE TO FULLY APPEAR ON SCREEN

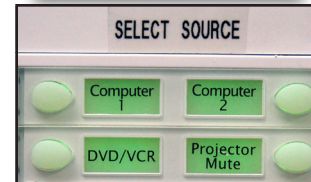

## SELECT A SOURCE

“COMPUTER 1 or 2” FOR LAPTOPS or “DVD/VCR” TO PLAY A DVD OR VIDEOTAPE

### TO DISPLAY A LAPTOP COMPUTER:

**CONNECT LAPTOP COMPUTER VIA PROVIDED CABLE**

**IT IS BEST TO CONNECT LAPTOPS BEFORE BOOTING THEM UP:**

COMPUTER 1 input cable is located near Control Panel.

COMPUTER 2 is the wireless adapter.

(Note: The COMPUTER 2 button may have to be pushed twice.)

**Note: Apple users must provide their own DVI-VGA adapter or miniDVI-VGA adapter. These adapters are provided with most Mac laptops. (The adapter is not provided with MacBooks—it must be purchased from Apple).**

### DVD/VCR CONTROLS



### TO PLAY A DVD OR VIDEOTAPE:

**PULL DOWN FRONT METAL PANEL TO ACCESS DVD/VCR PLAYER**

**ON THE “DVD/VCR CONTROLS” PANEL:**

**PUSH THE “POWER” BUTTON**

**PUSH THE “VCR/DVD” BUTTON TO TOGGLE BETWEEN VCR & DVD**

**TO OPERATE THE DVD PLAYER OR VCR, USE THE BUTTONS ON THE “DVD/VCR CONTROLS” PANEL, or A REMOTE CONTROL FOR THE DVD/VCR IS STORED BEHIND THE DVD/VCR.**


### TROUBLESHOOTING:

#### IF NO PICTURE APPEARS FROM VCR/DVD:

Be sure the DVD or VCR option is selected on both the player & projector.

#### IF NO PICTURE APPEARS FROM A LAPTOP COMPUTER:

Make sure you've selected correct input for your source (COMPUTER 1 or COMPUTER 2).

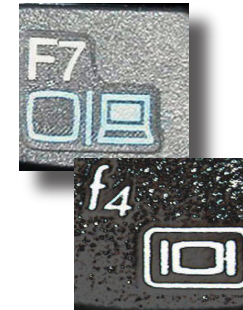

Most Windows laptops have a “FUNCTION” key above the numeric keys with “LCD/Monitor” or a picture of a monitor above it. Hold down the “FN” key and simultaneously press the LCD/Monitor Key. You may have to slowly toggle through the different options until the computer screen picture appears on the projection screen. Wait at least 10-15 seconds before toggling the button each time.

Apple: Select “Mirror” in the System Preferences “Displays” menu.